


Vers-a-basic 'BD' bench (double) © Copyright ESE


21 September 2006. This drawing superceeds all others, any discrepancies please report ASAP.




Seat wood layout
(supplied fitted)

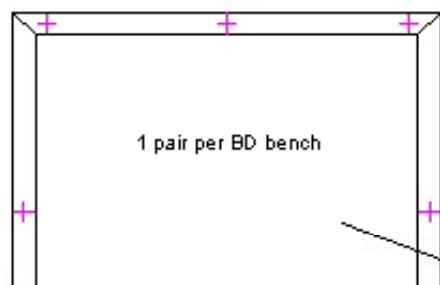

1 pair per BD bench

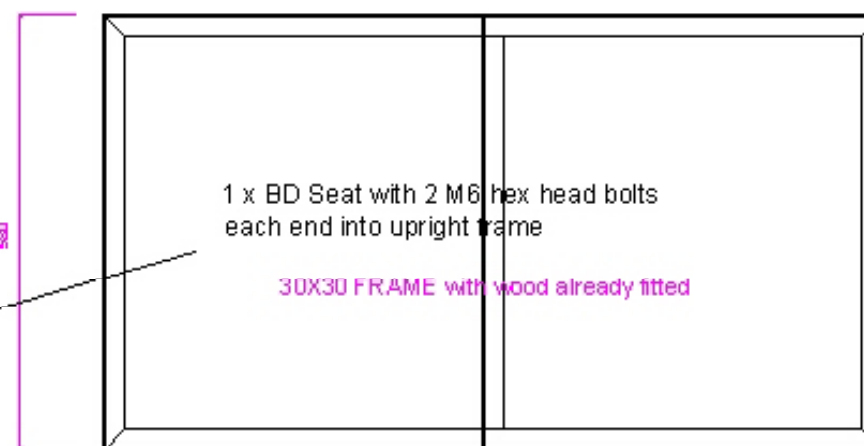

1 per BD12@ 1040 / BD15@ 1340 / BD18@ 1640 / BD21@ 1940mm long

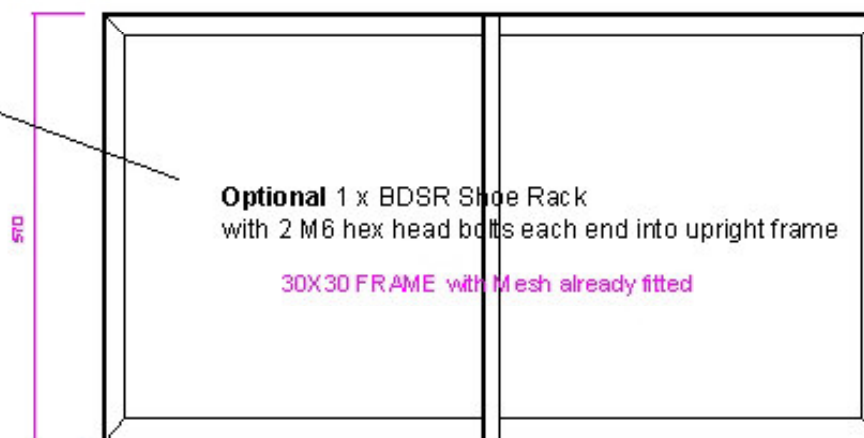

1 per BDRS12M @ 1040 / BDRS15M @ 1340 / BDRS18M @ 1640 / BDRS21M @ 1940mm long




Unwrap all components carefully and check quantities (please report discrepancies by return).
Please make sure all bolts and screws are well tightened before use.

Vers-a-basic 'BD' bench (double) © Copyright ESE


21 September 2006. This drawing superceeds all others, any discrepancies please report ASAP.




Seat wood layout
(supplied fitted)

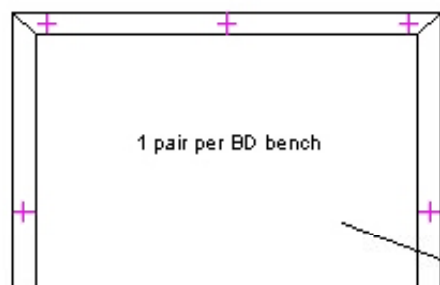

1 pair per BD bench

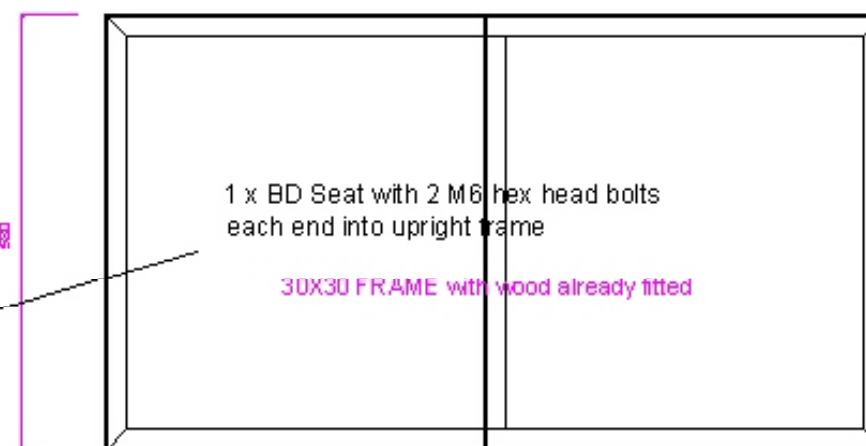

1 per BD12@ 1040 / BD15@ 1340 / BD18@ 1640 / BD21@ 1940mm long

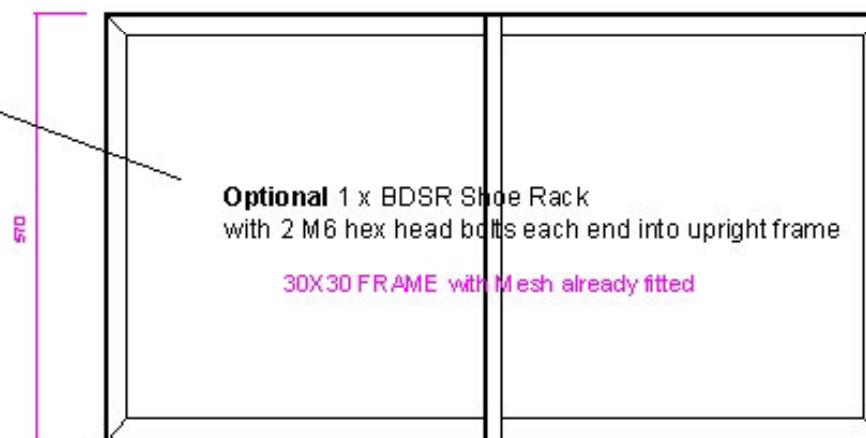

1 per BDR12M @ 1040 / BDR15M @ 1340 / BDR18M @ 1640 / BDR21M @ 1940mm long



Unwrap all components carefully and check quantities (please report discrepancies by return).
Please make sure all bolts and screws are well tightened before use.