

Vers-a-single 'SSX' no top shelf bench © Copyright ESE

21 September 2006. This drawing superceeds all others, any discrepancies please report ASAP.



2 M6 bolts with dome head nuts through the wood rail and into each upright frame used to fix the predrilled hat and coat rail

Hanging rail plate with 2 x holes for M6 bolts

Hat and coat rail requires coat hooks to be screwed into predrilled holes on site (packed separately in this parcel to prevent damage).



1 per SSX12@ 1040 / SSX15@ 1340 / SSX18@ 1640 / SSX21@ 1940mm long

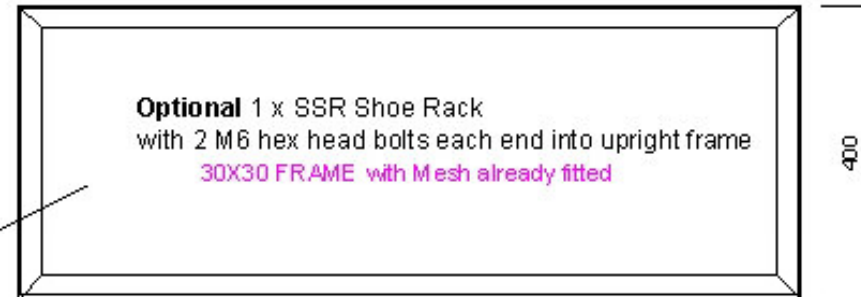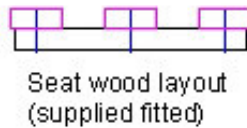

1 per SSR12M@ 1040 / SSR15M@ 1340 / SSR18M@ 1640 / SSR21M@ 1940mm long

1 pair per SSX bench



Unwrap all components carefully and check quantities (please report discrepancies by return). Please make sure all bolts and screws are well tightened before use.