
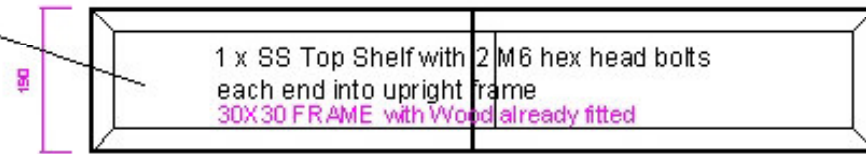



Vers-a-single 'SS' wood top shelf bench © Copyright ESE


21 September 2006. This drawing superceeds all others, any discrepancies please report ASAP.

2 M6 bolts with dome head nuts through the wood rail and into each upright frame used to fix the predrilled hat and coat rail

Hanging rail plate with 2 x holes for M6 bolts

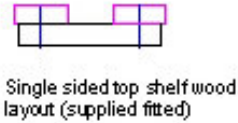

1 per SS12@ 1040 / SS15@ 1340 / SS18@ 1640 / SS21@ 1940mm long

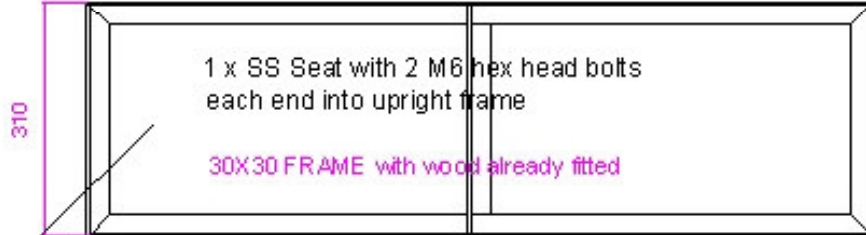

1 per SS12@ 1040 / SS15@ 1340 / SS18@ 1640 / SS21@ 1940mm long



1 per SSR12M@ 1040 / SSR15M@ 1340 / SSR18M@ 1640 / SSR21M@ 1940mm long

Hat and coat rail requires coat hooks to be screwed into predrilled holes on site (packed seperately in this parcel to prevent damage).



Unwrap all components carefully and check quantites (please report discrepancies by return). Please make sure all bolts and screws are well tightened before use.